## Satel<sup>\*</sup>

## WZ-400 ADDRESSABLE REMOTE INDICATOR

The **WZ–400** indicator is used to indicate the selected events in the fire alarm system by LEDs. The events may involve:

- a single detector / a single side line module:
  - alarm triggered by detector / module
    - faulty detector / module
    - $\circ\,$  disabled detector / module
- zones:
  - $\circ~\mbox{alarm}$  in zone
  - faulty device in zone
  - $\circ\,$  disabled device in zone
- groups:
  - activation of group sounders
  - faulty device in group
  - disabled device in group

The indicator is designed to operate in the detection line of the **ACSP-402** addressable fire alarm control panel.

- optical signaling by LEDs
- signaling controlled by the control panel:
  - $\circ\;$  capability to link the indicator with a single detector,
  - a single side line module, zone or group
  - selection of events to be indicated
- double-sided short-circuit isolator
- powered from the detection line



## **TECHNICAL DATA**

Enclosure dimensions	84 x 84 x 30 mm
Operating temperature range	-10°C+55°C
Weight	56 g
Maximum humidity	93±3%
Current draw when detecting	200 µA
Current draw when emitting an alarm	1,4 mA
Power supply voltage	1826 V DC
Event signalling (fire alarm)	świecenie ciągłe
Event signalling (disabled device)	wolne miganie (0,91 Hz)
Event signalling (faulty device)	szybkie miganie (3,65 Hz)

CE 🕱